驱动程序安装说明

1、解决压"USB 接口驱动程序":

文件(F) 编辑(E) 查看(V) 工具	具(T) 帮助(H)	
组织 ▼ 包含到库中 ▼	共享 ▼ 新建文件夹	
☆ 收藏夹 🤇	名称	修改日期
🗼 下载	USB接口驱动程序.rar	2015/4/7 16:40
📃 桌面	🧰 基本电路.jpg	2015/4/7 16:34
🗐 最近访问的位置	🔤 驱动程序安装及指令说明.doc	2015/4/7 16:54
	🔊 声光报警器测试软件.exe	2015/4/7 15:46
库		
📘 暴风影视库		

2、打开已解压的文件夹:

名称	修改日期	类型	大小
\mu хб4	2014/4/12 5:56	文件夹	
x86	2014/4/12 5:56	文件夹	
CP210xVCPInstaller_x64.exe	2014/4/12 5:56	应用程序	1,026 KB
🕿 CP210xVCPInstaller_x86.exe	2014/4/12 5:56	应用程序	901 KB
ø dpinst.xml	2014/4/12 5:56	XML Document	12 KB
ReleaseNotes.txt	2014/4/12 5:56	Text Document	11 KB
SLAB_License_Agreement_VCP_Windows	2014/4/12 5:56	Text Document	9 KB
slabvcp.cat	2014/4/12 5:56	安全目录	12 KB
📰 slabvcp.inf	2014/4/12 5:56	安装信息	5 KB

要根据电脑的操作系统安装对应的驱动程序。

32 位操作系统:运行 CP210xVCPInstaller_x86.exe

64 位操作系统:运行 CP210xVCPInstaller_x64. exe

3、然后插入报警器,在设备管理器中出现串口标志:



	_		×	
	1			
串口号 [COM16]▼] 波特率 [9600]▼] 数据[2]8 ▼] 19止12 1 ▼]	<u>1</u>]}	十端口		
端口已打开	送	羽端口		
数据发送 0110001A0001000FD8				
数据接收 01100100018D				
_ V2.0版本软件声光控制————————————————————————————————————				
── 设备地址 ────────────────────────────────────				
001 - 002 - C 1200 C 2400 C 4800 @ 9600 C 19200 C 38400 C 57600 C 115200				
Ugan 1 1 1 1 1 1 1 1 1 1 1 ·				
读取参数 设备复位 读取设备ID 读取设备地址 闪光+声音1 声音		声光 关闭		
	2			
		退出		

4、运行"声光报警器测试软件",打开相应的端口号,即可实现对报警器的工作: